

Work Order ID 87073

July-10-12 2:50:21 PM

87073

Page 1

Item ID: DSI 9410-011 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Step Modification
 Start Date: 7/10/12 Start Qty: 5.00 ***5*** Cust Item ID:
 Required Date: 8/03/12 Req'd Qty: 5.00 ***5*** Customer:
 Reference:

Approvals: Process Plan: *P* Date: 120711 Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
DSI 9410	B								
100		0.00							
100									
DC		0.00							
Document Control	Memo Photocopy bluefile & type labels per PPP DSI 9410-011 CHG002								
110	Pick Kit	0.00							
110									
Packaging	Memo	0.00							
Packaging									
120	QC4- 100% Inspect kits for completeness	0.00							
120									
QC	Memo	0.00							
Quality Control									

DAS 16 8-5 12/07/13 JB

JF Ver MLS 12-7-18 (5)

5 12/07/20 JB

DAS 16 8-5 12/07/13

(5)

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

H:\FORMS\Quality Assurance\approved QANCRWO RevE

NOTE: Date & initial all entries

H:\FORMS\Quality Assurance\approved QANCRWO RevE

Picklist Print

July-10-12 2:50:20 PM

Page 1

Work Order ID: 87073

Parent Item: DSI 9410-011

Parent Item Name: Step Modification

Start Date: 7/10/12

Required Date: 8/03/12

Start Qty: 5.00

Required Qty: 5.00

Comments: IPP RevA: New issue DD verified by:EC
by:EC IPP rev:B as per dwg RevB DD 10.03.03 verified

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
AN4-15A Bolt		Purchased	No			110	Each	520.0000	8	40			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				358		100							
				121652		100							
				GA		100							
				120449		100							
				ST358		320							
				118706		3							
				120422		1							
				122141		316							
AN960JD416 Washer	NAS1149D0463J	Purchased	No			110	Each	29.0000	16	80			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST351		29							
				116289		8							
				119097		21							
D2732-030 Rubber Cushion		Manufactured	No			110	Each	2.0000	4	20			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST402		2							
				84498		2							
D3595 = 200 = 300 Rubber Cushion (per sq ft)		Manufactured	No			110	sf	334.1500	0.0833	0.4165			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				MAT052		334.15							
				68954		334.15							

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Picklist Print

July-10-12 2:50:20 PM

Page 2

Work Order ID: 87073

Parent Item: DSI 9410-011

Parent Item Name: Step Modification

Start Date: 7/10/12

Required Date: 8/03/12

Start Qty: 5.00

Required Qty: 5.00

MS21042L4

Nut

Purchased

No

110

Each

1,177.0000

8

40

Location

Loc Qty

Loc Code

ST300

1177

119075

116

121011

193

121444

699

121652

169

121444

JB 12/07/20

July-10-12 2:50:20 PM

Shop Packet Print

Page 2

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

DART SERVICE INSTRUCTION

TO AMEND DRAWING D350-591 REV. F

REF. CANADIAN STC: SH92-6

FAA STC: SH967NE

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 57073

2120711

TO IMPROVE THE FIT OF THE D350-591-311/-312 STEPS, IT IS ACCEPTABLE TO INSTALL THE DSI 9410-011 KIT. INSTALL THE D2732-030 CUSHION (AFT CROSSTUBE) AND D3595-200-300 CUSHION (FWD CROSSTUBE) AS SHOWN IN FIGURE 1 IN PLACE OF THE D2856-400-720 ABRASION STRIP CALLED OUT ON DRAWING D350-591 REV. F.

FOR CUSTOMERS WHO HAVE PREVIOUSLY INSTALLED D2856-400-720 ABRASION STRIPS REMOVE THE ABRASION STRIPS IN ACCORDANCE WITH ICA-D350-591. PRIOR TO INSTALLING THE DSI 9410-011 KIT.

DSI 9410-011 KITS WILL BE INCLUDED WITH D350-591-311/-312 STEPS AT CHANGE 002 AND SUBSEQUENT.

QTY -041	PART NUMBER	DESCRIPTION
X	DSI 9410-011	STEP MODIFICATION KIT
4	D2732-030	CUSHION
2	D3595-200-300	CUSHION
8	AN4-15A	BOLT
16	AN960JD416	WASHER
8	MS21042L4	NUT (OR MS21042-4)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 08.09.08
CERT. NO.: SH92-6
ISSUE NO.: 10

B	SHEET 1 DELETE REVISED P/L. (SEPERATE DSI KIT FROM MAIN KIT SEE NCR 08-082 FOR DETAILS)	AJS	08.09.08
A	NEW ISSUE	PH	08.03.27
REV.	DESCRIPTION	BY	DATE
DESIGN	<i>AJS</i>	DART AEROSPACE LTD	
DRAWN	<i>AJS</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9410	SHEET 1 OF 2
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	STEP MODIFICATION KIT	NTS
DATE	08.09.08	COPYRIGHT © 2008 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

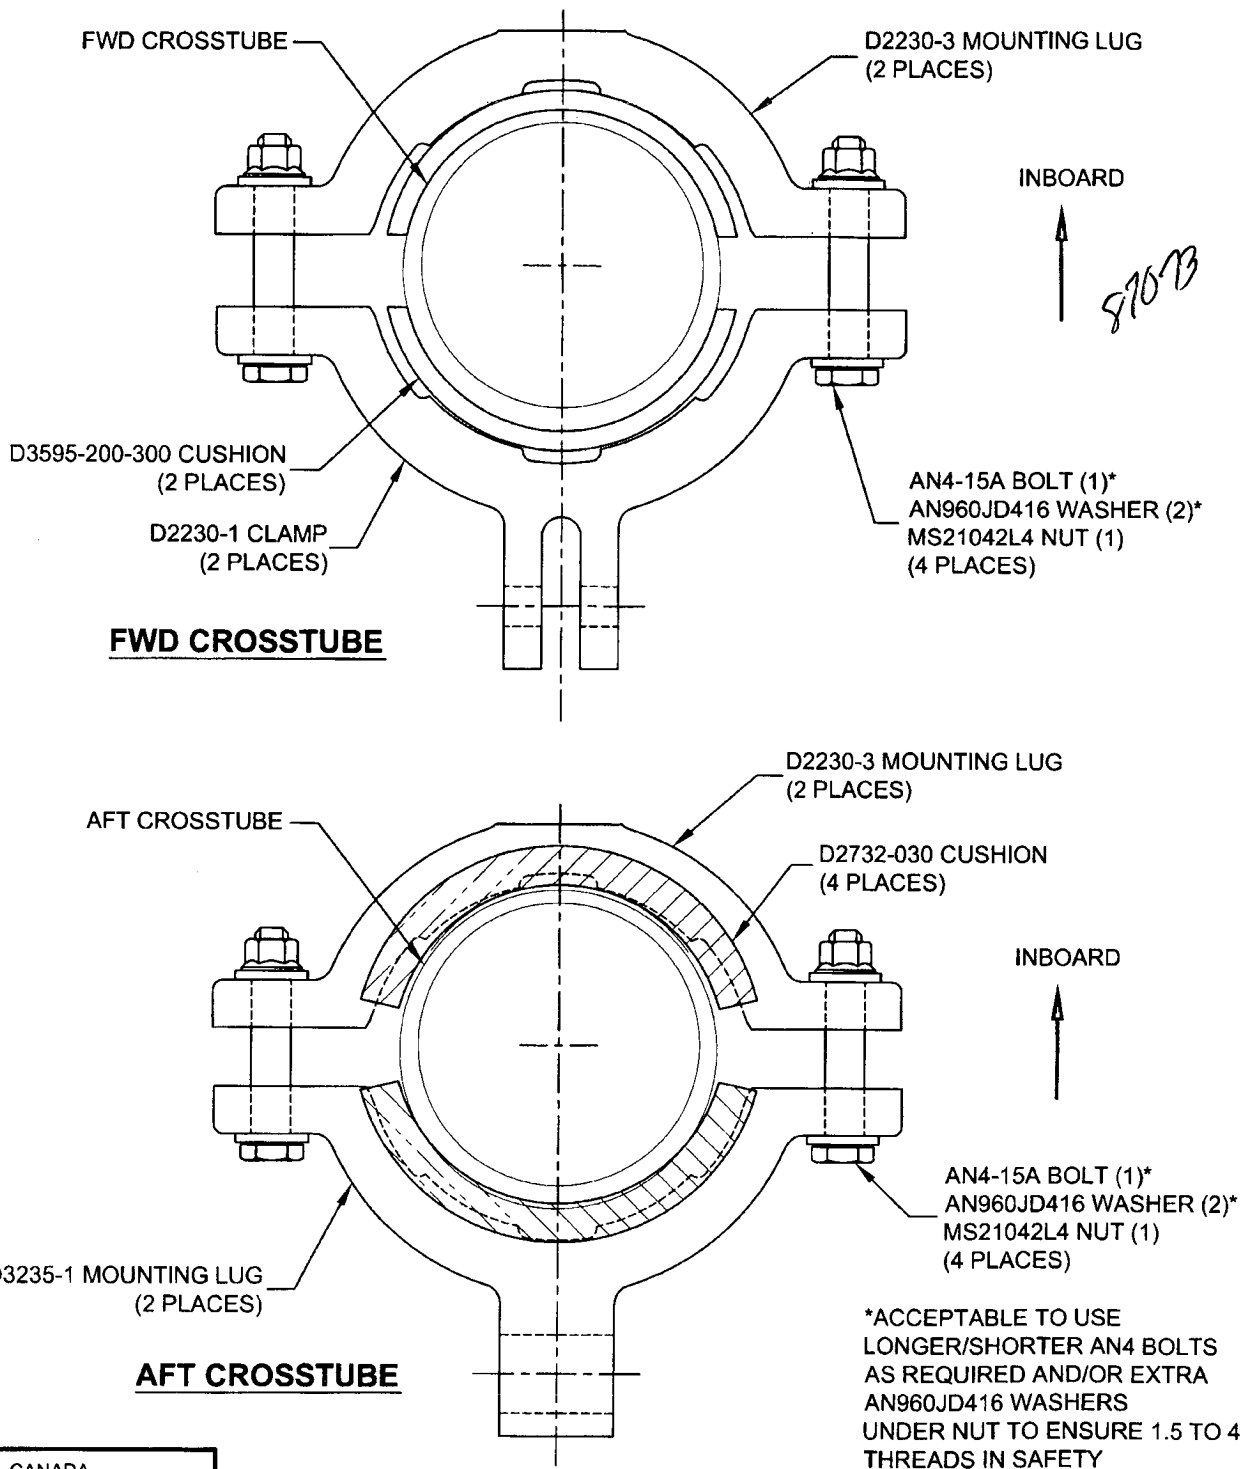


FIGURE 1 - CLAMP/CUSHION INSTALLATION

CANADA DEPARTMENT OF TRANSPORT AIRCRAFT CERTIFICATION BRANCH DAO # 01-O-01	
APPROVED <i>[Signature]</i> D. SHEPHERD (DE # 02)	
DATE:	08.09.08
CERT. NO.:	SH92-6
ISSUE NO.:	10

DESIGN	<i>AS</i>	DART AEROSPACE LTD	
DRAWN	<i>AS</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9410	SHEET 2 OF 2
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	STEP MODIFICATION KIT	NTS
DATE	08.09.08	COPYRIGHT © 2008 BY DART AEROSPACE LTD <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

DART SERVICE INSTRUCTION

TO AMEND DRAWING D350-591 REV. F

REF. CANADIAN STC: SH92-6

FAA STC: SH967NE

TO IMPROVE THE FIT OF THE D350-591-311/-312 STEPS, IT IS ACCEPTABLE TO INSTALL THE DSI 9410-011 KIT. INSTALL THE D2732-030 CUSHION (AFT CROSSTUBE) AND D3595-200-300 CUSHION (FWD CROSSTUBE) AS SHOWN IN FIGURE 1 IN PLACE OF THE D2856-400-720 ABRASION STRIP CALLED OUT ON DRAWING D350-591 REV. F.

FOR CUSTOMERS WHO HAVE PREVIOUSLY INSTALLED D2856-400-720 ABRASION STRIPS REMOVE THE ABRASION STRIPS IN ACCORDANCE WITH ICA-D350-591. PRIOR TO INSTALLING THE DSI 9410-011 KIT.

DSI 9410-011 KITS WILL BE INCLUDED WITH D350-591-311/-312 STEPS AT CHANGE 002 AND SUBSEQUENT.

QTY -041	PART NUMBER	DESCRIPTION
X	DSI 9410-011	STEP MODIFICATION KIT
4	D2732-030	CUSHION
2	D3595-200-300	CUSHION
8	AN4-15A	BOLT
16	AN960JD416	WASHER
8	MS21042L4	NUT (OR MS21042-4)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 08.09.08
CERT. NO.: SH92-6
ISSUE NO.: 10

B	SHEET 1 DELETE REVISED P/L. (SEPERATE DSI KIT FROM MAIN KIT SEE NCR 08-082 FOR DETAILS)	AJS	08.09.08
A	NEW ISSUE	PH	08.03.27
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	J	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9410	SHEET 1 OF 2
APPROVED	AP	TITLE	SCALE
DE APPR.	HA	STEP MODIFICATION KIT	NTS
DATE	08.09.08	COPYRIGHT © 2008 BY DART AEROSPACE LTD <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

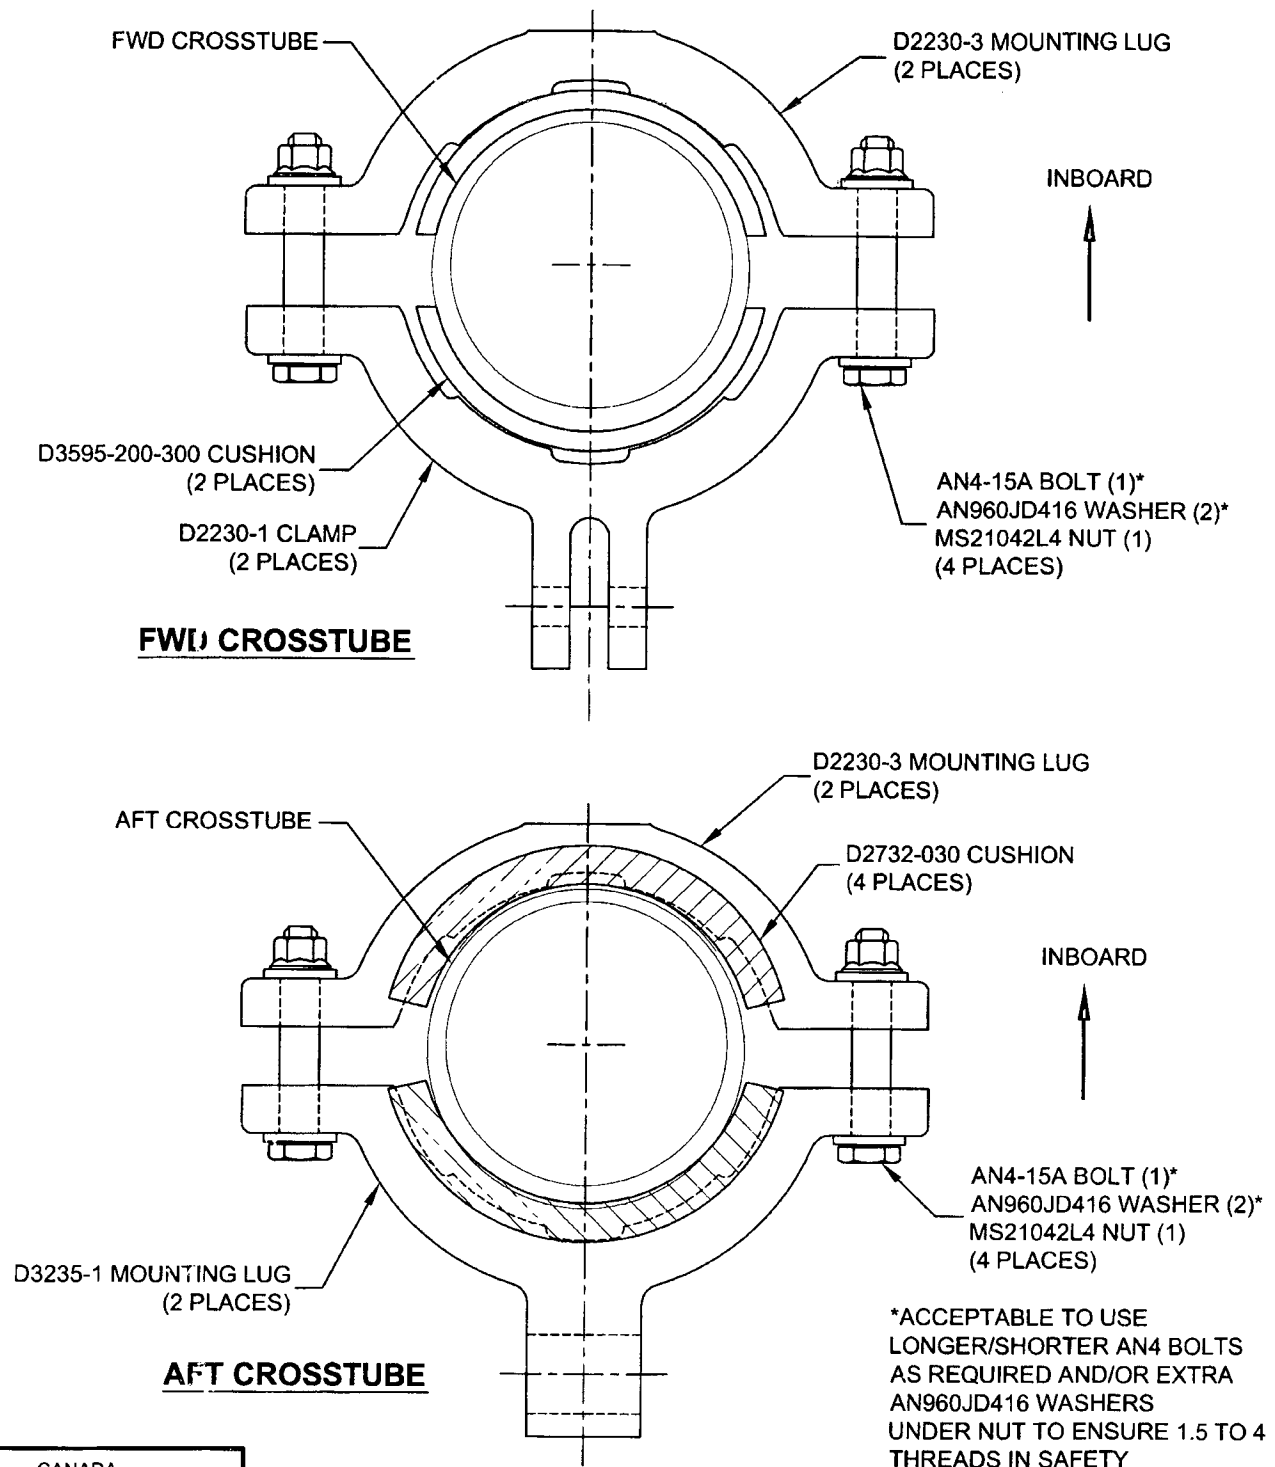


FIGURE 1 - CLAMP/CUSHION INSTALLATION

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED
[Signature]
BY: D. SHEPHERD (DE # 02)

DATE: 08.09.08
CERT. NO.: SH92-6
ISSUE NO.: 10

DESIGN	<i>AS</i>	DART AEROSPACE LTD	
DRAWN	<i>AS</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9410	SHEET 2 OF 2
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	STEP MODIFICATION KIT	NTS
DATE	08.09.08	COPYRIGHT © 2008 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

DART SERVICE INSTRUCTION

TO AMEND DRAWING D350-591 REV. F

REF. CANADIAN STC: SH92-6

FAA STC: SH967NE

TO IMPROVE THE FIT OF THE D350-591-311/-312 STEPS, IT IS ACCEPTABLE TO INSTALL THE DSI 9410-011 KIT. INSTALL THE D2732-030 CUSHION (AFT CROSSTUBE) AND D3595-200-300 CUSHION (FWD CROSSTUBE) AS SHOWN IN FIGURE 1 IN PLACE OF THE D2856-400-720 ABRASION STRIP CALLED OUT ON DRAWING D350-591 REV. F.

FOR CUSTOMERS WHO HAVE PREVIOUSLY INSTALLED D2856-400-720 ABRASION STRIPS REMOVE THE ABRASION STRIPS IN ACCORDANCE WITH ICA-D350-591. PRIOR TO INSTALLING THE DSI 9410-011 KIT.

DSI 9410-011 KITS WILL BE INCLUDED WITH D350-591-311/-312 STEPS AT CHANGE 002 AND SUBSEQUENT.

QTY -041	PART NUMBER	DESCRIPTION
X	DSI 9410-011	STEP MODIFICATION KIT
4	D2732-030	CUSHION
2	D3595-200-300	CUSHION
8	AN4-15A	BOLT
16	AN960JD416	WASHER
8	MS21042L4	NUT (OR MS21042-4)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 08.09.08
CERT. NO.: SH92-6
ISSUE NO.: 10

B	SHEET 1 DELETE REVISED P/L. (SEPERATE DSI KIT FROM MAIN KIT SEE NCR 08-082 FOR DETAILS)	AJS	08.09.08
A	NEW ISSUE	PH	08.03.27
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	A	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9410	SHEET 1 OF 2
APPROVED	PH	TITLE	SCALE
DE APPR.	PH	STEP MODIFICATION KIT	NTS
DATE	08.09.08	COPYRIGHT © 2008 BY DART AEROSPACE LTD <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

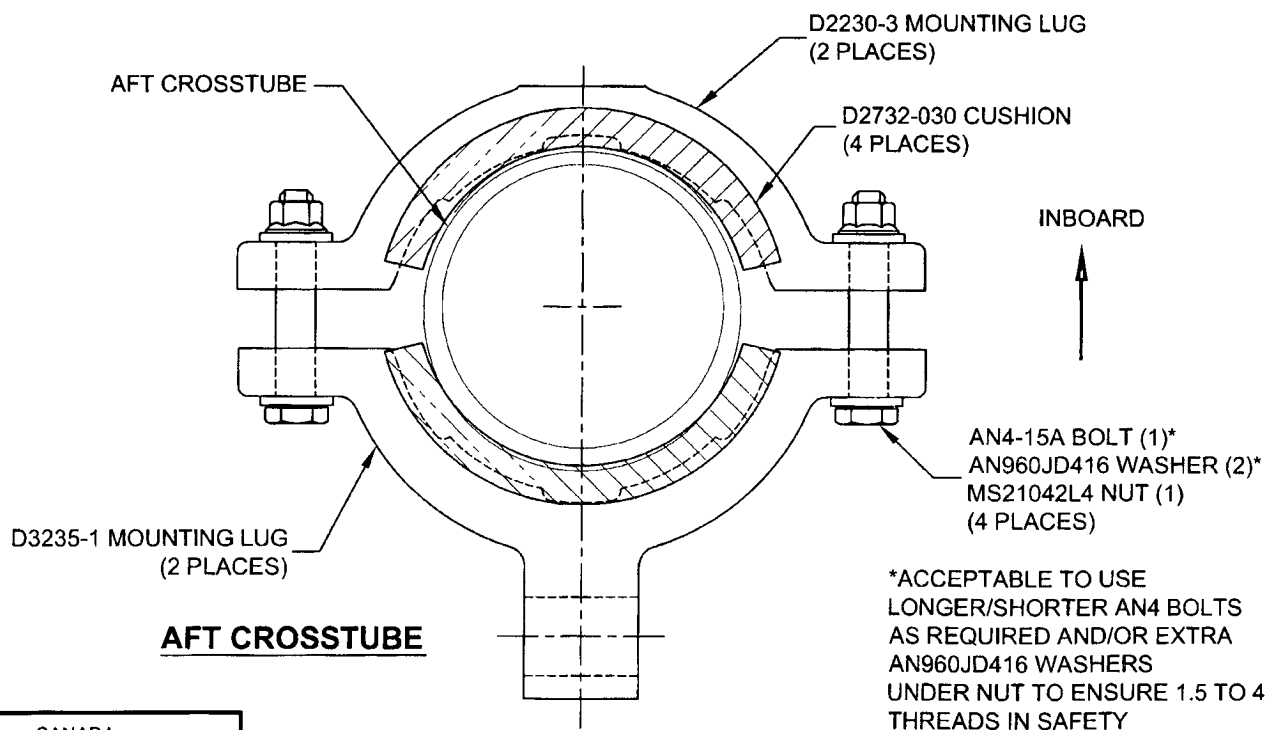
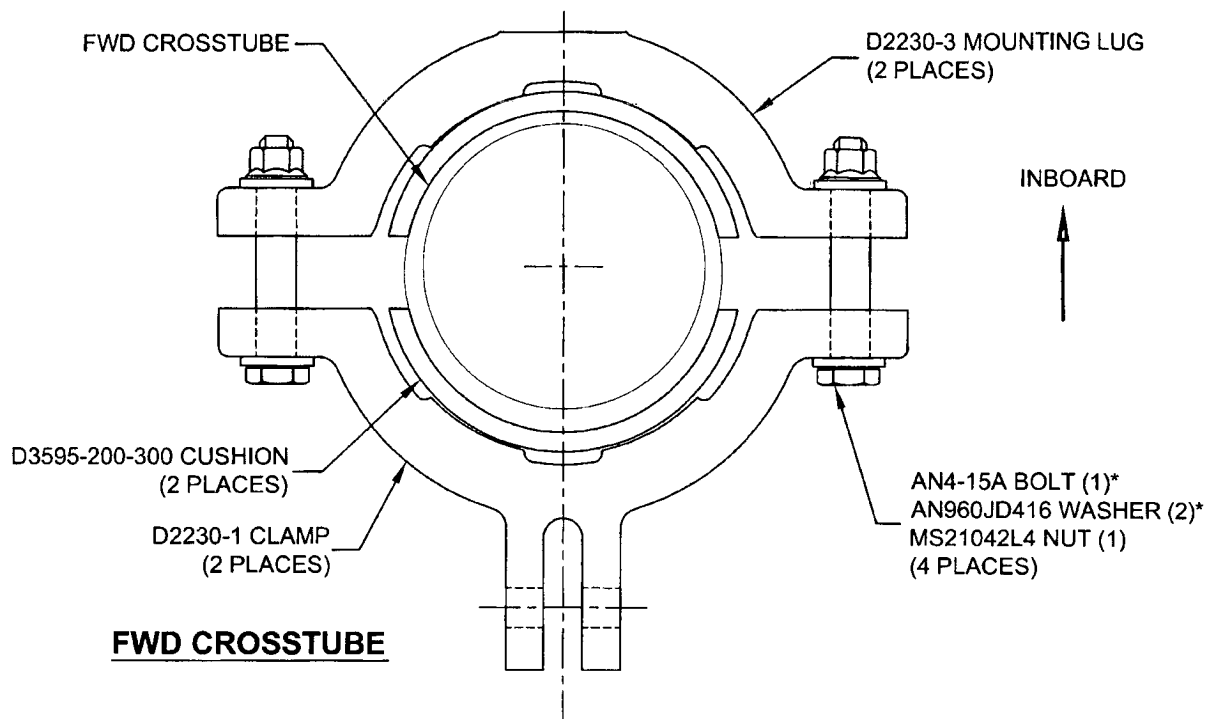


FIGURE 1 - CLAMP/CUSHION INSTALLATION

CANADA DEPARTMENT OF TRANSPORT AIRCRAFT CERTIFICATION BRANCH DAO # 01-O-01	
APPROVED	
BY:	<i>[Signature]</i>
D. SHEPHERD (DE # 02)	
DATE:	08.09.08
CERT. NO.:	SH92-6
ISSUE NO.:	10

DESIGN	<i>AS</i>	DART AEROSPACE LTD	
DRAWN	<i>AS</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9410	SHEET 2 OF 2
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	STEP MODIFICATION KIT	NTS
DATE	08.09.08	COPYRIGHT © 2008 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			